


Route channel 1 to Laptop A and control your files with Timecode Vinyls (Mode 1) or Timecode CDs (Mode2)

Play normal Vinyl (Phono) or CD (Line)*

Route channel 1 to Laptop B and control your files with Timecode Vinyls (Mode 1) or Timecode CDs (Mode2)

Mode 1 = Timecode Vinyl

Mode 2 = Timecode CD

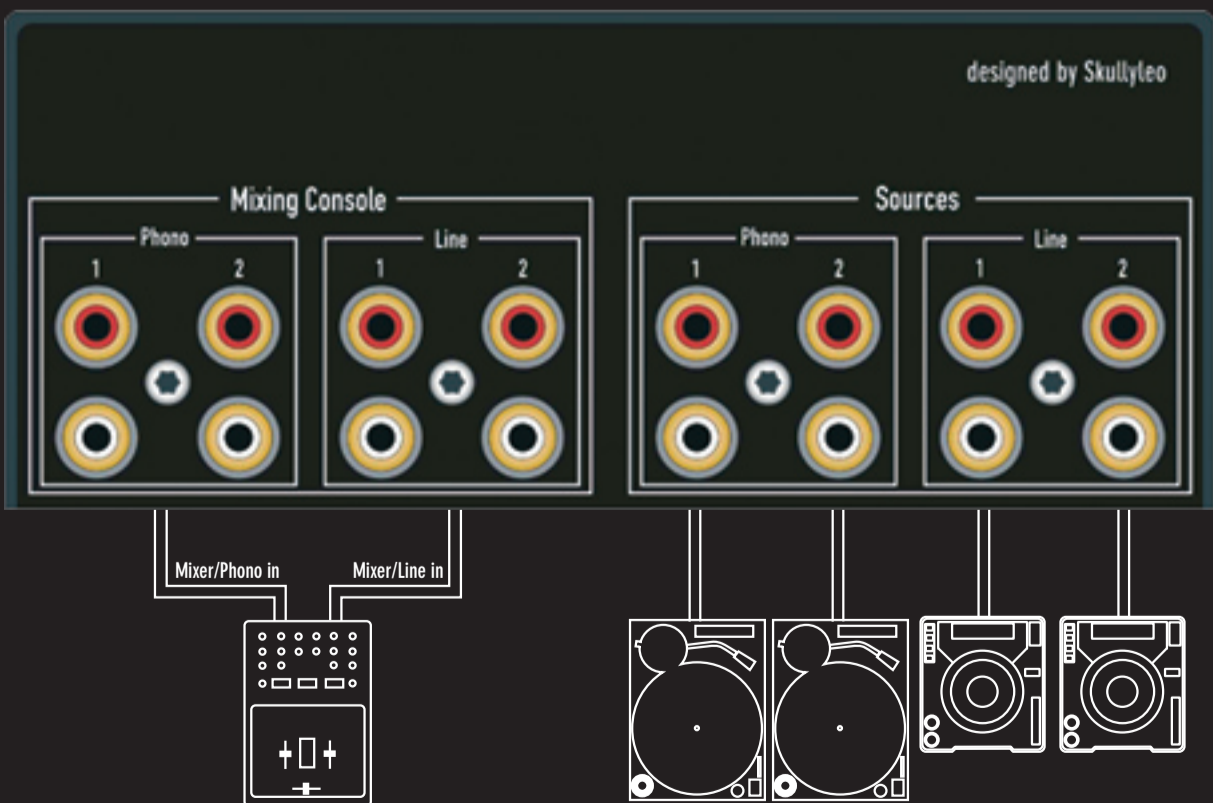

*NOTE: If you want to play normal Vinyl, select: Mode1/THRU and switch the mixer channel to „Phono“

SWITCHBOX Digital-DJ Manual

How to connect the Switchbox to the Audio-Interface / Scratch-Amp / Vinyl Box etc...

Switchbox Interface A/B Serato

Phono 1	➔	Input 1
Phono 2	➔	Input 2
Line 1	➔	Line 1
Line 2	➔	Line 2

Switchbox Interface A/B Traktor Scratch

Phono 1	➔	In 1/2
Phono 2	➔	In 3/4
Line 1	➔	Out 1/2
Line 2	➔	Out 3/4

Switchbox Interface A/B Final Scratch

Phono 1	➔	In 1
Phono 2	➔	In 2
Line 1	➔	Out 1
Line 2	➔	Out 2

Switchbox Interface A/B Torq Conective Vinyl

Phono 1	➔	Input 1
Phono 2	➔	Input 2
Line 1	➔	Output 1
Line 2	➔	Output 2

Switchbox Interface A/B Numark Vinyl Control

Phono 1	➔	Input 1
Phono 2	➔	Input 2
Line 1	➔	Output 1
Line 2	➔	Output 2